

Part-No.: C040015

## Charger for Crane Remote Control Batteries

### for HBC Radiomatic

Type:	FuB5AA / FuB10AA
Input:	15 Volt / 0.8 A (DC IN)
Output:	6.0 Volt / 1 A


### Function

The battery charger is designed exclusively for use with Ni-CD and Ni-MH battery pack when either attached to or removed from the transceiver.


### Charging Procedure

1. Plug the AC adapter into the adapter jack on the back of the charger.
2. Plug the AC adapter into an AC outlet.
3. Along the guides provided on both sides of the charger slot, insert a battery pack or transceiver attached a battery pack into the charger.
4. The „Charge LED“ illuminate in red and charging starts.
5. When charging is completed, the color of the „Full LED“ changes to green.
6. Remove the battery pack or transceiver from charger slot.
7. Unplug the AC adapter from the AC outlet.

### Construction

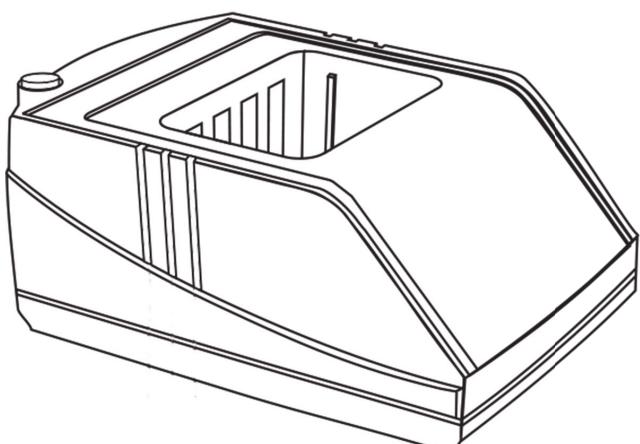

### Indicator Designation

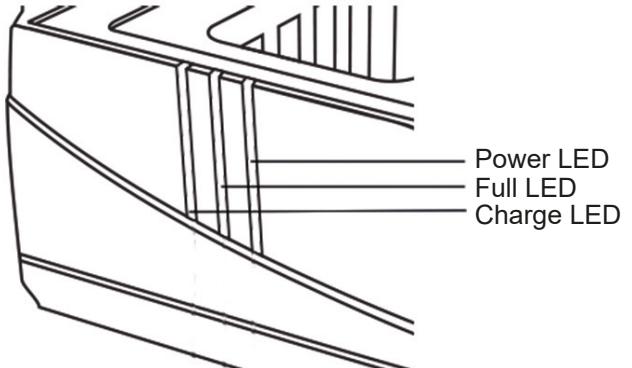

### Indicator Declaration

Charger Operation Status	Charge LED	Full LED	Power LED
Power connection	Red Flash	Green Flash	Red
Without Battery	Off	Off	Red
Charging	Red	Off	Red
Fully Charged	Off	Green	Red
Function Failure	Red Flash	Off	Red

### Warning

1. The battery charger is designed exclusively for use with Ni-CD and Ni-MH battery pack.
2. Do not use it to charge any other rechargeable battery or dry cell.
3. Do not expose the charger to high/low temperature and damp places.
4. Do not use the battery charger as a power source for any appliances.
5. Do not disassemble the charger. Incorrect reassembling can cause fire or an electric shock.
6. During charging cycles it is normal for the battery to become warm. If the battery becomes too hot to touch during charging, unplug the charger immediately and discontinue using.
7. If the battery charger is not used for a long period of time, disconnect the AC adapter from the wall socket and remove the battery pack from the battery charger.